



TEST REPORT: MFM-30-12

30W High Reliable Green Medical On Board Type

■ DESIGN VERIFY TEST

Output Function Test

Input Function Test

Protection Function Test

Control Function Test

Component Stress Test

■ SAFETY & E.M.C. TEST

Safety Test

E.M.C. Test

■ RELIABILITY TEST

ENVIRONMENT TEST



DESIGN VERIFY TEST
OUTPUT FUNCTION

NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT
1	OUTPUT VOLTAGE TOLERANCE (Max)	V1 : 2.0% ~ -2.0%	I/P : 80VAC / 264VAC O/P: FULL / MINLOAD TA= 25°C	V1: -0.08% ~ -0.17%
2	LINE REGULATION (MAX.)	V1 : 0.5% ~ -0.5%	I/P : 80VAC / 264VAC O/P: FULL LOAD TA : 25°C	V1: 0.00% ~ 0.00%
3	LOAD REGULATION(MAX.)	V1 : 0.5% ~ -0.5%	I/P : 230VAC O/P: MIN LOAD ~ FULL LOAD TA : 25°C	V1: 0.08% ~ -0.08%
4	OVER/UNDERSHOOT TEST	< ±5%	I/P : 230VAC O/P: FULL LOAD TA : 25°C	TEST< 4.3 %
5	RIPPLE & NOISE(Max)	V1 : 120 mVp-p	I/P : 230VAC	V1 : 62.8 mVp-p
			O/P: FULL LOAD	
high frequency:			low frequency:	
6	SET UP TIME (MAX.)	230VAC : 500ms 115VAC : 500ms	I/P : 230VAC I/P : 115VAC O/P: FULL LOAD TA : 25°C	230VAC : 120ms 115VAC : 68ms
INPUT=230VAC/50HZ @ FULL LOAD		INPUT=115VAC/60HZ @ FULL LOAD		
CH1 : Output Voltage CH2 : AC Input Voltage		CH1 : Output Voltage CH2 : AC Input Voltage		



30W High Reliable Green Medical On Board Type MFM-30 series

7	RISE TIME (MAX.)	230VAC : 30ms 115VAC : 30ms	I/P : 230VAC I/P : 115VAC O/P: FULL LOAD TA : 25°C	230VAC : 7.4ms 115VAC : 7.4ms
	INPUT=230VAC/50HZ @ FULL LOAD CH1 : Output Voltage	INPUT=115VAC/60HZ @ FULL LOAD CH1 : Output Voltage		
8	HOLD UP TIME (TYP.)	230VAC : 40ms 115VAC : 12ms	I/P : 230VAC I/P : 115VAC O/P: FULL LOAD TA : 25°C	230VAC : 68.0ms 115VAC : 18.0ms
	INPUT=230VAC/50HZ @ FULL LOAD CH1 : Output Voltage CH2 : AC Input Voltage	INPUT=115VAC/60HZ @ FULL LOAD CH1 : Output Voltage CH2 : AC Input Voltage		
9	DYNAMIC LOAD	V1 : 1200 mVp-p	I/P : 230VAC O/P: (1)Full/Min load 50%duty/120HZ (2)Full/Min load 50%duty/1KHZ TA : 25°C	V1: (1). 356mv (2). 257mv unit:mVp-p
	FULL /MIN LOAD 50%DUTY / 120HZ	FULL /MIN% LOAD 50%DUTY / 1KHZ		




30W High Reliable Green Medical On Board Type MFM-30 series

INPUT FUNCTION TEST


NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT
1	INPUT VOLTAGE RANGE	80VAC ~ 264VAC	I/P : TESTING O/P : FULL LOAD Ta : 25°C	72.0VAC ~ 264VAC
			I/P : LOW-LINE = 97VAC HIGH-LINE = 300VAC O/P : FULL/MIN LOAD ON:30 Sec ; OFF:30 Sec 10MIN (POWER ON/OFF NO DAMAGE)	TEST : OK
2	INPUT FREQUENCY RANGE	47HZ ~ 63HZ NO DAMAGE	I/P : 80VAC ~ 264VAC O/P : FULL-MIN LOAD Ta : 25°C	TEST : OK
3	INPUT CURRENT (TYP.)	0.50A / 230VAC 0.75A / 115VAC	I/P : 230VAC I/P : 115VAC O/P : FULL LOAD TA : 25°C	I= 0.24A / 230VAC I= 0.44A / 115VAC
4	LEAKAGE CURRENT	< 80.00µA	I/P : 264VAC O/P : MIN LOAD TA : 25°C	Touch current 49.7 µA
5	NO LOAD POWER CONSUMPTION	< 0.075W	I/P : 230VAC O/P : MIN LOAD TA : 25°C	< 0.0741 W
	EFFICIENCY (TYP.)	90.0%	I/P : 230VAC O/P : FULL LOAD TA : 25°C	92.5 %

7

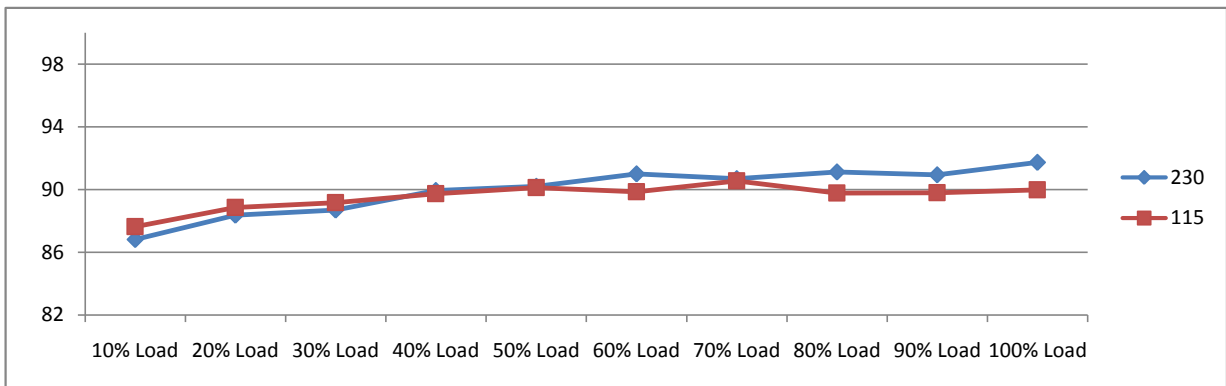

8

INRUSH CURRENT (TYP.)	45A / 230VAC 25A / 115VAC twidth= 555 us measured at 50% Ipeak COLD START	I/P : 230VAC I/P : 115VAC O/P : FULL LOAD TA : 25°C	I= 40.6A / 230VAC I= 21.8A / 115VAC T50= 384.0us / 230VAC
	INPUT=230VAC/50HZ @ FULL LOAD	INPUT=115VAC/50HZ @ FULL LOAD	

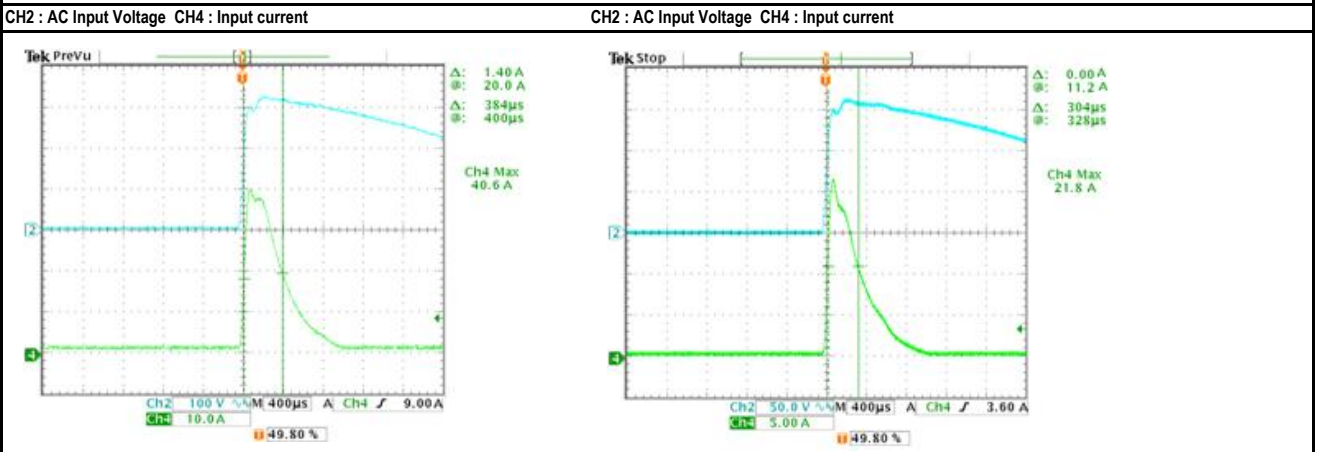



30W High Reliable Green Medical On Board Type MFM-30 series

PROTECTION FUNCTION TEST

NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT
1	OVER LOAD PROTECTION	115% ~ 165%	I/P: 264VAC I/P: 230VAC I/P: 100VAC O/P: TESTING TA : 25°C	160.00% 264VAC 156.00% 230VAC 154.00% 100VAC Hiccup Mode
2	OVER VOLTAGE PROTECTION	12.60V ~ 16.20V	I/P: 264VAC I/P: 230VAC I/P: 80VAC O/P: MIN LOAD TA : 25°C	14.50V 264VAC 14.50V 230VAC 14.40V 80VAC Shut down Re- power ON
3	SHORT PROTECTION	SHORT EVERY OUTPUT 1 HOUR NO DAMAGE	I/P: 264VAC I/P: 80VAC O/P: FULL LOAD Ta: 25°C	NO DAMAGE Hiccup Mode

COMPONENT STRESS TEST

NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT
1	PWM Power Transistor	Q1 Rated : 600V 7.5A	I/P : 267VAC VDS : O/P : (1)Full Load Turn on (2) Output Short (3)Full load continue Ta : 25°C	VIN: 267VAC VDS: (1). 442.00V (2). 448.00V (3). 438.00V
2	O/P MOSFET	Q100 Rated : 100V 80.0A Rated :	I/P : 267VAC VDS : O/P : (1)Full Load Turn on (2) Output Short (3)Full load continue Ta : 25°C	Q100 VDS : (1). 89.00V (2). 84.00V (3). 86.00V
3	Input Capacitor	C5 Rated : 56uf 400V	I/P : 267VAC O/P : (1)Full Load Turn on /Off (2)Min load Turn on /Off (3)Full Load /Min load Change (4)Full Load Continue Ta : 25°C	(1). 360.00V (2). 360.00V (3). 356.00V (4). 344.00V
4	Control IC	U1 Rated : 28V (max) -0.3 (min) U100 Rated : 38V (max) -0.3V (min)	I/P : 267VAC O/P : (1)Full Load (2)Output Short (3)O.L.P (4)O.V.P (5)Low Line No Load Vo(min) Ta : 25°C	U1 U100 (1). 19.60V 12.1 (2). 12.10V 0.9 (3). 19.80V 12.1 (4). 22.50V 14.4 (5). 19.00V 12.2
5	Clamp Diode	D5 Rated : 1000V 1.0A	I/P : 267VAC O/P : (1)Dynamic Load Full/Min Load (2)Full load continue Ta : 25°C	(1). 418.00V (2). 420.00V

SAFETY & E.M.C. TEST

SAFETY TEST

NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT
1	WITHSTAND VOLTAGE	I/P-O/P : 4.000KVAC /min	I/P-O/P: 4.250KVAC /min Ta : 25°C	I/P-O/P: 1.18mA NO DAMAGE
2	ISOLATION RESISTANCE	I/P-O/P : 500VDC>100MΩ	I/P-O/P: 500VDC Ta : 25°C/70%RH	I/P-O/P: 9999.0MΩ NO DAMAGE

E.M.C. TEST

NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT
1	HARMONIC	EN61000-3-2 CLASS A	I/P : 230VAC /50HZ O/P : FULL LOAD Ta : 25°C	PASS



30W High Reliable Green Medical On Board Type MFM-30 series

2	CONDUCTION	EN55011 CLASS B	I/P : 230VAC /50HZ O/P : FULL LOAD / 50% LOAD Ta : 25°C	PASS Test by certified Lab
3	RADIATION	EN55011 CLASS B	I/P : 230VAC /50HZ O/P : FULL LOAD Ta : 25°C	PASS Test by certified Lab
4	E.S.D	EN61000-4-2 AIR: 15KV / Contact: 8KV	I/P : 230VAC /50HZ O/P : FULL LOAD Ta : 25°C	CRITERIA A
5	E.F.T	EN61000-4-4 MEDICAL INPUT: 2KV	I/P : 230VAC /50HZ O/P : FULL LOAD Ta : 25°C	CRITERIA A
6	SURGE	EN61000-4-5 MEDICAL LINE-LINE:1KV	I/P : 230VAC /50HZ O/P : FULL LOAD Ta : 25°C	CRITERIA A

RELIABILITY TEST

NO	TEST ITEM	SPECIFICATION	TEST CONDITION	RESULT																																																																
1	TEMPERATURE RISE TEST	MODEL : MFM-30-24 1. ROOM AMBIENT BURN-IN : 1.0hrs IP: 230VAC O/P: 100% LOAD TA= 25.2°C 2. HIGH AMBIENT BURN-IN : 1.0hrs IP: 230VAC O/P: 100% LOAD TA= 61.2°C	<table border="1"> <thead> <tr> <th>NO.</th> <th>Position</th> <th>ROOM AMBIENT 25.2°C</th> <th>HIGH AMBIENT Ta: 61.2°C</th> </tr> </thead> <tbody> <tr><td>1</td><td>LF1</td><td>40.6°C</td><td>72.6°C</td></tr> <tr><td>2</td><td>LF2</td><td>46.3°C</td><td>75.2°C</td></tr> <tr><td>3</td><td>C5</td><td>49.7°C</td><td>78.6°C</td></tr> <tr><td>4</td><td>C40</td><td>61.6°C</td><td>84.0°C</td></tr> <tr><td>5</td><td>BD1</td><td>63.9°C</td><td>89.7°C</td></tr> <tr><td>6</td><td>R7</td><td>67.9°C</td><td>84.9°C</td></tr> <tr><td>7</td><td>T1 COIL</td><td>83.4°C</td><td>97.1°C</td></tr> <tr><td>8</td><td>Q100</td><td>86.0°C</td><td>92.7°C</td></tr> <tr><td>9</td><td>C105</td><td>80.2°C</td><td>92.1°C</td></tr> <tr><td>10</td><td>L100</td><td>57.3°C</td><td>78.8°C</td></tr> <tr><td>11</td><td>Q1</td><td>68.0°C</td><td>91.8°C</td></tr> <tr><td>12</td><td>U1</td><td>62.3°C</td><td>83.5°C</td></tr> <tr><td>13</td><td>D5</td><td>77.4°C</td><td>89.1°C</td></tr> <tr><td>14</td><td>R40</td><td>60.7°C</td><td>90.6°C</td></tr> <tr><td>60</td><td>TA</td><td>25.2°C</td><td>61.2°C</td></tr> </tbody> </table>	NO.	Position	ROOM AMBIENT 25.2°C	HIGH AMBIENT Ta: 61.2°C	1	LF1	40.6°C	72.6°C	2	LF2	46.3°C	75.2°C	3	C5	49.7°C	78.6°C	4	C40	61.6°C	84.0°C	5	BD1	63.9°C	89.7°C	6	R7	67.9°C	84.9°C	7	T1 COIL	83.4°C	97.1°C	8	Q100	86.0°C	92.7°C	9	C105	80.2°C	92.1°C	10	L100	57.3°C	78.8°C	11	Q1	68.0°C	91.8°C	12	U1	62.3°C	83.5°C	13	D5	77.4°C	89.1°C	14	R40	60.7°C	90.6°C	60	TA	25.2°C	61.2°C	
NO.	Position	ROOM AMBIENT 25.2°C	HIGH AMBIENT Ta: 61.2°C																																																																	
1	LF1	40.6°C	72.6°C																																																																	
2	LF2	46.3°C	75.2°C																																																																	
3	C5	49.7°C	78.6°C																																																																	
4	C40	61.6°C	84.0°C																																																																	
5	BD1	63.9°C	89.7°C																																																																	
6	R7	67.9°C	84.9°C																																																																	
7	T1 COIL	83.4°C	97.1°C																																																																	
8	Q100	86.0°C	92.7°C																																																																	
9	C105	80.2°C	92.1°C																																																																	
10	L100	57.3°C	78.8°C																																																																	
11	Q1	68.0°C	91.8°C																																																																	
12	U1	62.3°C	83.5°C																																																																	
13	D5	77.4°C	89.1°C																																																																	
14	R40	60.7°C	90.6°C																																																																	
60	TA	25.2°C	61.2°C																																																																	
2	OVER LOAD BURN-IN TEST	NO DAMAGE 1 HOUR (MIN)	I/P : 230VAC O/P : 144.0% LOAD Ta : 25°C	TEST : OK																																																																
3	LOW TEMPERATURE TURN ON TEST	NO DAMAGE 1 HOUR (MIN)	I/P : 264VAC / 100VAC O/P : FULL LOAD Ta : -40.0°C	TEST : OK																																																																
4	HIGH HUMIDITY HIGH TEMPERATURE HIGH VOLTAGE TEST	AFTER 12 HOURS IN CHAMBER ON CONTROL 60°C NO DAMAGE	I/P : 272VAC O/P : FULL LOAD Ta : 60°C HUMIDITY= 95.0% RH	TEST : OK																																																																
5	TEMPERATURE COEFFICIENT	±0.03% /°C (0~60°C)	I/P : 230VAC O/P : FULL LOAD	±0.0055% /°C (0~60°C)																																																																
6	STORAGE TEMPERATURE TEST	1. Thermal shock Temperature : -45°C ~ +90°C 2. Temperature change rate : 25°C / MIN 3. Dwell time low and high temperature : 30 MIN/EACH 4. Total test cycle : 10 CYCLE 5. Input/Output condition : STATIC		TEST : OK																																																																
7	THERMAL SHOCK TEST	1. Thermal shock Temperature : -45°C ~ 65°C 2. Temperature change rate : 25°C / MIN 3. Dwell time low and high temperature : 30 MIN/EACH 4. Total test cycle : 16 CYCLE 5. Input/Output condition : 230VAC Full Load AC ON/OFF test turn on 3sec ; turn off 1sec @ 15CYCLE 230VAC Full Load AC ON turn on continue @ 1CYCLE		TEST : OK																																																																
8	VIBRATION TEST	1 Carton & 1 Set (1) Waveform : Sine Wave (2) Frequency : 10~500Hz (4) Acceleration : 3G (5) Test Time : 60min in each axis (X.Y.Z) (6) Ta : 25°C		TEST : OK																																																																



30W High Reliable Green Medical On Board Type MFM-30 series

9	CAPACITOR LIFE CYCLE	:SUPPOSE C105 IS THE MOST CRITICAL COMPONENT						
		(1) I/P : 230VAC	O/P : FULL LOAD	Ta= 25°C	LIFE TIME	(1).	56962.2	HRS
		(2) I/P : 230VAC	O/P : FULL LOAD	Ta= 60°C	LIFE TIME	(2).	32909.3	HRS
		(3) I/P : 230VAC	O/P : 75% LOAD	Ta= 60°C	LIFE TIME	(3).	42198.7	HRS
		(4) I/P : 230VAC	O/P : 50% LOAD	Ta= 60°C	LIFE TIME	(4).	69229.4	HRS
10	MTBF	Conducted by Parts Stress Analysis Prediction 6325.8K hrs min. Telcordia SR-332 (Bellcore) ; 778.9K hrs min. MIL-HDBK-217F (25°C)						
11	DMTBF /Accelerated Life test	Demonstration Mean Time Between Failure (Expected Life): 30000HRS @ TA 60°C						

TEST RESULT	TESTER	REVIEW	APPROVAL
PASS	LIUTT		WANGDZ